

OlioSep Mini Oil/Water Separator



INTELLIGENT

POWERFUL

PROVEN



Best Quality Gravity
Separator in the Market

Quality Stainless Steel
Construction Built to Last

Comes with ERE's OlioSkim
Adjustable Skimmer that will Skim All
Suspended Oil & Water or Oil Only from
Sumps or Holding Tanks

OlioSep Oil/Water Separator is a Proven
Technology that will Separate All Suspended
Oils and Produces an effluent of 10 mg/l of
Oil Droplets Measuring 20 or Larger in Size

Industries Served:

- Car Wash
- Industrial Waste Water
- Garage Stations
- Metal Machining



MADE IN CANADA

Quality
Stainless
Reliable
Separation

Comes with OlioSkim Adjustable Floating Skimmer

Skims All Oils from the Sumps or Holding Tanks

Superior Separation with our Patented Coalescers

Variable Speed Controller for Precise Flow

Adjustable Weir for Oil Skimming

Can Be Ordered With Water Filtration

Factory Tested

Unsurpassed Warranty



OlioSep Mini
Integrated System Portable Separator

Superior Free Phase Separation

Typical Applications

- Ground Water
- Cooling Water
- Sumps
- Steam Condensate
- Surface Skimming
- Ultra Filtration Pretreatment
- Floor Drains
- Vehicle Wash Water
- Tramp Oil
- Machine Coolant
- Part Washing Machines
- Process Water




OlioSep Features

- Stainless Steel Construction
- Sedimentational Design
- High Temperature Range
- Level Control Adaptability
- Light Weight & Very Portable
- Adjustable Oil Skimming Weir
- Oleophilic Coalescer Media Pack
- 1-Year Warranty



Worry Free Solutions

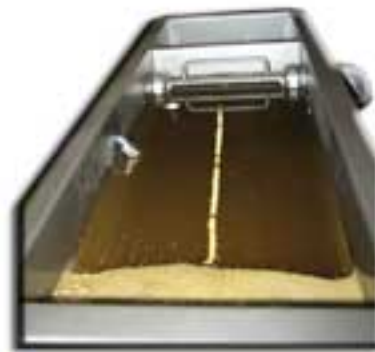

OlioSep Separator ER-8000-05-SS

- Flow Rate: 1/2 GPM (2 L/M)
- Max Flow: 2 GPM (7.57 L/M)
- Dimensions:
- Width: 10" (25.4 cm)
- Length: 15" (38.1 cm)
- Height: 15" (38.1 cm)
- Inlet Diameter: 1" (2.54 cm)
- Outlet Diameter: 1" (2.54 cm)
- Oil Outlet Dia.: 1 1/2" (3.81 cm)



Variable Speed Pump

- Progressive Cavity Pump
- Low Noise Pump
- Will Gently Pump Oil/Water into the Separator without the risk of Emulsions
- Flow Rate: Up to 4 GPM (15 L/M)
- With Variable Speed Motor & Touch Pad Operation for Speed & Smooth Control of the unit
- Specifications:
- 1/2 Hp TEFC Motor
- 120/240V/1/60



OlioSkim

- Adjustable Skimmer Head
- Application: Oil and Water
- Float Ball Diameter: 4"
- Skimming Head Diameter: 2"
- Total Floating Height: 6"
- Total Skimmer Diameter: 13"
- Weight: 10 lb
- Minimal Water Depth: 12"
- Hose Connection: 1/2" Male Barb

Package Features

- Stainless Steel OlioSep Separator
- Stainless Steel Stand With Wheels
- OlioSkim Adjustable Floating Skimmer
- Pump Prefilter
- Variable Speed Control Pump
- Can be ordered with Effluent Water Treatment Package

YOUR AUTHORIZED ERE DEALER

SUPERIOR CUSTOMER SUPPORT
888 287-3732

www.ereinc.com
sales@ereinc.com

FAX: (514) 326-8961

ERE Inc., 8605 Champ d'Eau, Montreal, Qc, H1P 3B8



ERE